

# REMOTE INDICATION, SENSING RESISTORS

| REMOTE INDICATION & METERS                                                                                                                    |                                                                                                                                       |                                                                                                     |
|-----------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|
| Product                                                                                                                                       | Features                                                                                                                              | Accessory For                                                                                       |
| <b>RK-302</b><br>Remote Indication and Reset Kit<br>         | Panel-mounted remote indication and reset, standard 22 mm mounting with NEMA 4 and NEMA 13 rating.                                    | <b>SE-325</b>                                                                                       |
| <b>RK-332</b><br>Remote Indication and Reset Kit<br>         | Panel-mounted remote indication and reset, standard 22 mm mounting with NEMA 4 and NEMA 13 rating.                                    | <b>SE-330</b><br><b>SE-330AU</b><br><b>SE-330HV</b>                                                 |
| <b>PGB-6130</b><br>Remote Indication and Reset Assembly<br>  | Remote indication of overcurrent, phase unbalance, phase loss, phase sequence, and overtemperature. Remote reset included.            | <b>PGR-6130</b>                                                                                     |
| <b>PGB-6800</b><br>Remote Indication and Reset Assembly<br>  | Remote indication of overcurrent, undercurrent, phase unbalance, phase loss, and phase sequence. Remote reset included.               | <b>PGR-6800</b>                                                                                     |
| <b>PGA-0500</b><br>Analog % Current Meter<br>                | Panel-mounted analog meter displays ground-fault current as a percentage of the set point.                                            | <b>SE-601</b><br><b>PGR-4300</b><br><b>PGR-6100</b> <b>SE-701</b><br><b>SE-703</b><br><b>SE-704</b> |
| <b>PGA-0510</b><br>Analog Ohm Meter<br>                      | Panel-mounted analog ohmmeter displays insulation resistance from 0 Ω to infinity.                                                    | <b>PGR-3200</b><br><b>PGR-6100</b>                                                                  |
| <b>E2323 &amp; E2324</b><br>Megaohmmeter & Kiloohmmeter<br> | Flush-mounted units designed for connection with the T3200 for instrument readings.                                                   | <b>T3200</b>                                                                                        |
| <b>M8100</b><br>Synchroscope<br>                           | Flush-mounted units provide illuminated indication of the phase and frequency difference between voltages on two separate AC systems. | <b>T5000</b> <b>T4500</b><br><b>C6200 FlexGen</b><br><b>S6000 Sigma</b>                             |

| SENSING RESISTORS                                                                                                                     |                                                                                                                   |                                                                |
|---------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|
| Product                                                                                                                               | Features                                                                                                          | Accessory For                                                  |
| <b>ER-600VC (PGE-600V)</b><br>Sensing Resistor<br> | Used on systems up to 1 kV. (Continuous duty)                                                                     | <b>SE-330</b> <b>SE-325</b><br><b>SE-330AU</b>                 |
| <b>SE-MRE-600</b><br>Enclosure<br>                 | Used in outdoor enclosures. (ER-600VC ordered separately)                                                         | <b>ER-600VC</b>                                                |
| <b>ER-5KV (PGE-05KV)</b><br>Sensing Resistor<br>   | Used on systems up to 5 kV. (Continuous duty)                                                                     | <b>SE-330</b> <b>SE-325</b><br><b>SE-330AU</b>                 |
| <b>ER-5WP (PGE-05WV)</b><br>Sensing Resistor<br>   | Used on systems up to 5 kV, includes weather-protected terminals for use in outdoor enclosures. (Continuous duty) | <b>SE-330</b> <b>SE-325</b><br><b>SE-330AU</b>                 |
| <b>ER-15KV (PGE-15KV)</b><br>Sensing Resistor<br>  | Used on systems up to 15 kV. (Non-continuous duty)                                                                | <b>SE-330</b> <b>SE-325</b><br><b>SE-330HV</b> <b>SE-330AU</b> |
| <b>ER-25KV (PGE-25KV)</b><br>Sensing Resistor<br>  | Used on systems up to 25 kV. (Non-continuous duty)                                                                | <b>SE-330</b> <b>SE-325</b><br><b>SE-330HV</b> <b>SE-330AU</b> |
| <b>ER-35KV (PGE-35KV)</b><br>Sensing Resistor<br>  | Used on systems up to 35 kV. (Non-continuous duty)                                                                | <b>SE-330</b> <b>SE-330HV</b><br><b>SE-330AU</b>               |
| <b>ER-72KV (PGE-72KV)</b><br>Sensing Resistor<br>  | Used on systems up to 72 kV. (Non-continuous duty)                                                                | <b>SE-330HV</b>                                                |